



Sing 'n' Jam

Cat. No. 60-2757

The Sing 'n' Jam brings you hours of musical fun. It has everything you need to start performing — a microphone, amplifier, and telescoping microphone stand. Its features include:

Six Different Sound Effects — let you create the sound of thunder, machine guns, flushing toilets, audience “oohhs,” whistles, and clapping hands.

Line In Jack — lets you connect it with an optional CD or tape player, so you can sing along with your favorite music.

Echo Effect — adds echo to your voice as you sing or speak.

Main, Mic, and Line In Volume Controls — let you raise or lower the volume from the amplifier, microphone, and the optional audio source.

INSTALLING BATTERIES


The Sing 'n' Jam requires five C batteries (not supplied). For the best performance, we recommend RadioShack alkaline batteries.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries or different types of batteries.

Follow these steps to install batteries.

1. Use a screwdriver to loosen the screws in the battery compartment cover, then lift up the cover.

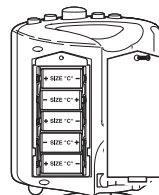


2. Place the batteries in the compartment, as indicated by the polarity symbols (+ and -) marked inside.
3. Close the cover and tighten the screws.

When the sound weakens, replace the batteries.


Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the Sing 'n' Jam for a long time, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

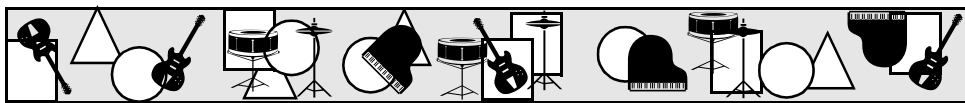

INSTALLING THE MICROPHONE STAND

The microphone stand's base is attached to the Sing 'n' Jam for shipping. Remove the base from the Sing 'n' Jam and attach it to the microphone stand, then extend the stand to the desired height. Remove the base and slide the microphone stand into the stand holder to store it.

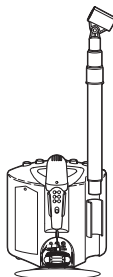


PLAYING THE SING 'n' JAM

Note: To use the Sing 'n' Jam as a karaoke system, you can connect an optional CD or tape player using an audio patch cord (not supplied) with a $\frac{1}{8}$ -inch (3.5-mm) plug. Your local RadioShack store has a wide selection of cords.


1. If you want to connect an optional audio source, insert one end of a patch cord's $\frac{1}{8}$ -inch (3.5-mm) plug to the Sing 'n' Jam's **LINE IN** jack and connect the other end of the cord to a headphone or **LINE OUT** jack on the audio source.

CONNECTING THE MICROPHONE


1. Insert the microphone's Y-adaptor plugs into the Sing 'n' Jam's **MIC** jacks, black plug to black jack and yellow plug to yellow jack.

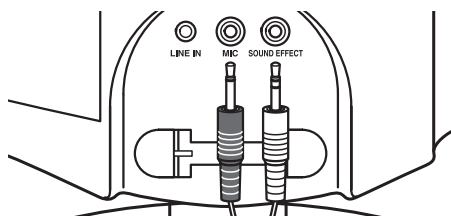


2. Place the microphone in the holder.

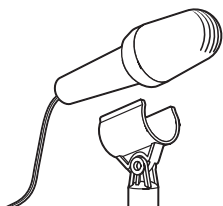

Note: The microphone only fits in the holder one way. Do not force it!

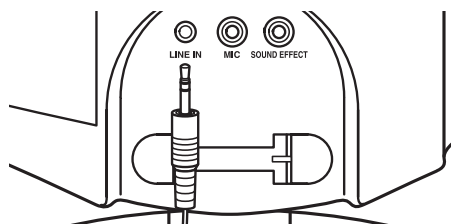


2. To turn on the Sing 'n' Jam, rotate the main volume control clockwise until it clicks. The power indicator lights.

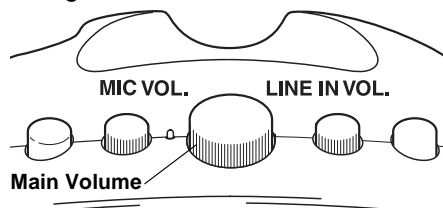

3. Adjust the main volume control (and **LINE IN VOL.**, if you connected an optional audio source) to a comfortable level.



4. Slide **ON/OFF** on the microphone to **ON**.

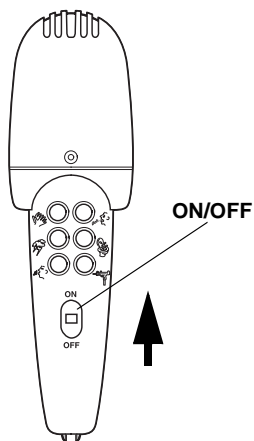

5. Rotate **MIC VOL.** to the desired level.
6. Sing or speak into the microphone, or press any sound effect button on the microphone. The Sing 'n' Jam automatically adds echo to the sound and the two red lights on the top of the amplifier flash.
7. To turn off the Sing 'n' Jam, rotate the main volume control counter-clockwise until it clicks. The power indicator goes out. Then slide **ON/OFF** on the microphone to **OFF**.

CARE

To enjoy your Sing 'n' Jam for a long time:

- Keep the Sing 'n' Jam dry. If it gets wet, wipe it dry immediately.
- Use and store the Sing 'n' Jam only in normal temperature environments.
- Handle the Sing 'n' Jam gently and carefully. Don't drop it.
- Keep the Sing 'n' Jam away from dust and dirt.
- Wipe the Sing 'n' Jam with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the Sing 'n' Jam's internal components can cause a malfunction and invalidate its warranty. If your Sing 'n' Jam is not performing as it should, take it to your local RadioShack store for assistance.

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

04/99

Printed in Hong Kong